



How To Hang your 9 Digits Medicine Cabinet

Step 1. See Cabinet Interior

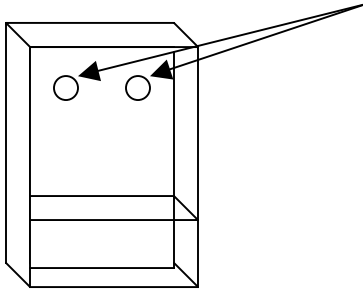


- Use a Philipshead or Robertson screwdriver to remove two screws that hold the wall cleat on the back of the cabinet.

Step 2. See Back of Cabinet

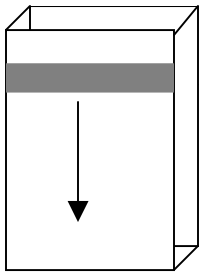

- The wall cleat will come off the back of the cabinet.

Step 3. Find Your Wall Studs

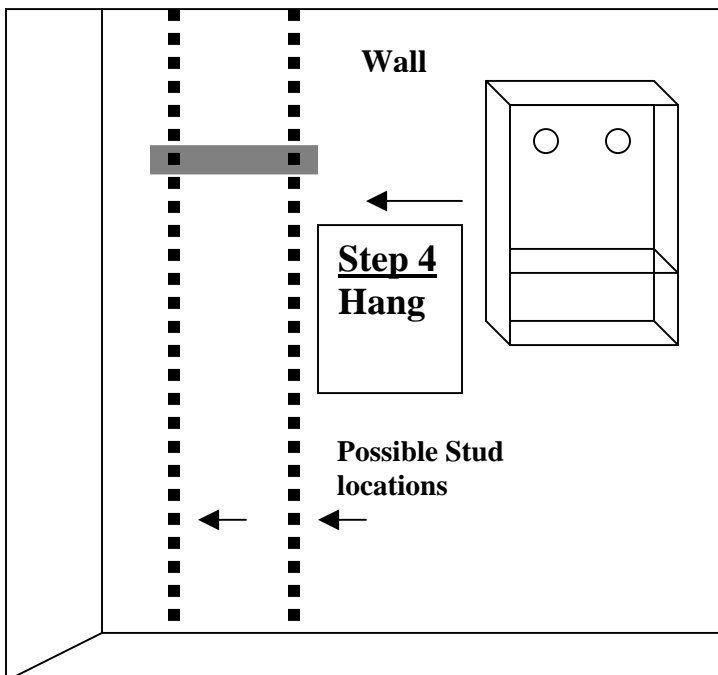

- Wall Studs are approximately 16 inches apart. Locate at minimum one stud. Drilling into two studs is more secure.
- To attach the cleat to the wall, place the cleat over the stud(s) and **drill 3 holes** through the cleat and wall.
- **Use minimum of 3- 2 ½ inch- flat head screws that are appropriate for your wall type-** (i.e., dry wall, plaster, brick.)- As recommended by your local hardware. **Do not use the screws provided to attach the cleat to the wall.**

Step 4. Hang Your Cabinet

- Hang your cabinet on the cleat that is now secured to the wall.
- **Place the screws provided back into the holes and secure tightly. This will ensure the cabinet does not swing when opened.**
- Cover the screws with the caps provided.

Step 5. Enjoy your new 9 Digits Medicine Cabinet! For further assistance call: 416-410-0796