


## How To Assemble Your 9 Digits Cabinet Trim Kit

**Required: Philips head screwdriver.**

**Hole in wall 24.5 X 30.5**


### Step 1.

Insert Ready to Assemble Fittings into Cams.

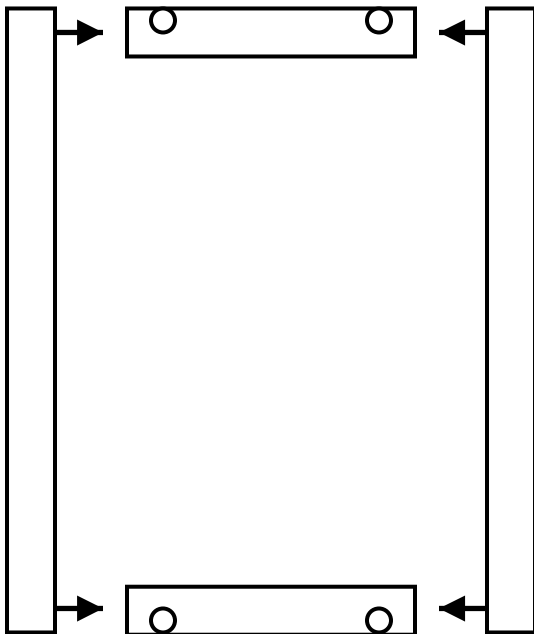

### Step 2.

Line up wood trim so they are flush. Use Philips head screwdriver to tighten clockwise.

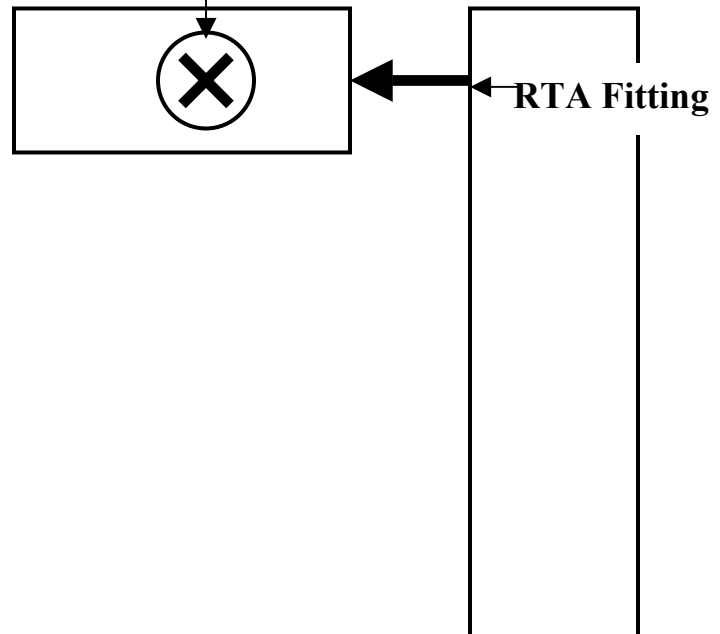

### Step 3.

- Remove double sided tape from back of trim
- Slide trim on back of cabinet with double sided tape facing wall.

### Step 4.

- Secure Cabinet in wall . Press trim against wall to finish.